



scion



SONIC REFRESH

REFRESH | RENEW | REFINE

CONTENTS

- PRODUCT OVERVIEW
- WHAT'S IN THE BOX
- DEVICE PARTS
- HOW TO USE
- CHARGING INSTRUCTIONS
- CARE AND MAINTENANCE
- SAFETY WARNINGS
- TROUBLESHOOTING
- PRODUCT SPECIFICATIONS
- WARRANTY



GETTING STARTED

Congratulations on taking the first step towards healthier skin by acquiring the Scion Sonic Refresh.

Please take a few moments to carefully **READ ALL INSTRUCTIONS BEFORE USE.**

This device should only be used for its intended purpose as described in this manual.

WARNING: *Do not disassemble or attempt to modify/repair this device in any way.*

PRODUCT OVERVIEW

Achieve youthful and healthier skin through the Scion Sonic Refresh. Combining specially designed silicone bristles and sonic pulsations to target specific skin issues, this easy-to-use cleansing device removes up to 99.5% of dirt, excess sebum and makeup residue and lifts dead skin cells in just 1 minute. It enhances the absorption of skincare products to reduce the visible signs of aging and gives the skin a natural glow.

PRODUCT BENEFITS AND FEATURES



Gentle deep
cleansing



Anti-aging



Skin firming



Up to 8,000
micropulses



IPX7 Waterproof



Smart Timer



Wireless
Charging

 


Body-safe
Silicone

WHAT'S IN THE BOX



Sonic Scion
Refresh



Induction
charging dock

 


charging cable




user manual

DEVICE PARTS

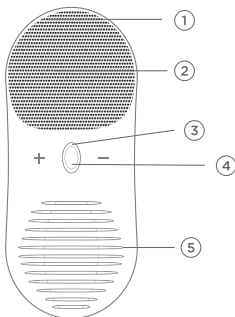


 1. Precision-Cleansing Zone
2. General Cleansing Zone
3. Indicator Light

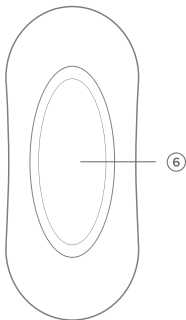

4. Power/Mode Selection Button
5. Anti-Aging Zone
6. Induction Charging Port

FUNCTIONS

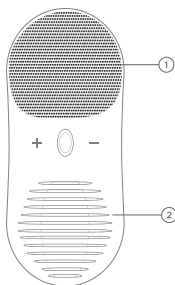

Facial Cleansing Mode

Deep cleans and removes 99.5% of dirt, excess sebum, make up residue and dead skin cells.

Skin-firming Massage Mode

Reduces the appearance of fine lines and wrinkles and improves skin elasticity.

HOW TO OPERATE

1. Press the power button once to switch on the Scion Sonic Refresh and activate the Cleansing Mode.
2. Press the button again to put the Scion Sonic Refresh in standby mode.*

**The indicator will emit a steady glow and the pulsations will stop, giving you a chance to rinse your face.*

3. Long press the power button to switch from standby mode to Facial Cleansing mode.

HOW TO OPERATE

4. Press the button two times to activate Skin firming Massage Mode.

NOTE: The Scion Sonic Refresh has 12 intensity levels which can be adjusted using the [+] or [-] buttons.

After each stage of the routine, the indicator light on the device will flash and the pulsing will momentarily pause, prompting you to move to the next area of your face.

HOW TO OPERATE: Facial Cleansing Mode

1. Remove all make up. Dampen face and apply facial cleanser. Wet the Scion Sonic Refresh then press the power button to switch on the device and activate Facial Cleansing mode.



2. Using outward strokes, gently go around the face in circular motions with the soft silicone bristles, starting from the cheek and chin then gliding up and down on both sides of the nose and to the center of the forehead, for 1 minute.

HOW TO OPERATE: Facial Cleansing Mode



3. Adjust the intensity level and delicately massage the under-eye area using the same outward motion. Press the button to put the Scion Sonic Refresh on standby mode while rinsing your face.*

**Pulsations will pause every 15 seconds to prompt you to move to another area of the face.*



4. Rinse and pat the face dry then apply other skincare products, if desired.

NOTE: Avoid using clay-based, silicone-based or grainy cleansers as they may damage the soft silicone bristles of the Scion Sonic Refresh.

HOW TO OPERATE: Skin Firming Massage Mode


1. Press the power button two times to select Skin firming Massage mode.



2. Using the larger grooves of the Scion Sonic Refresh, massage around the the face starting from the area between your eyebrows, to the right temple, the right side of the mouth, slowly moving upward to the other side of the face.*

**After 1 minute, pulsations will pause in 3 quick successions, indicating the end of the skin firming routine.*

CHARGING INSTRUCTIONS

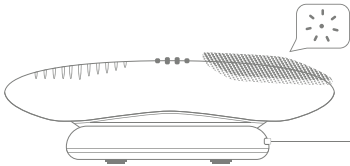

1. Attach the charging cable to the induction charging port and connect it to a power source. Place the Scion Sonic Refresh on the induction charging dock to start charging.
 2. The indicator will light once the device is fully charged.
- Make sure to use the inductive charger in a dry place.
 - Do not use the Scion Sonic Refresh while charging.
 - Never use the device if it is visibly damaged.
 - Only use with the compatible charging cable to keep the integrity of the device and to avoid damage.

CARE AND MAINTENANCE

- Always clean the Scion Sonic Refresh thoroughly after every use. Wash the brush surfaces with water and soap, then rinse with warm water. Pat dry with a lint-free cloth or towel.
- Avoid using clay-based, exfoliators or scrub types of cleansers as they may damage the silicone material.

NOTE:

Never use cleaning products containing alcohol, petrol or acetone as they may irritate the skin.

Only use a dry towel to wipe the induction charger and never rinse it under water.

SAFETY WARNINGS

Please carefully read and follow the instructions for proper use and safety.

Use the device only as recommended.

Follow all precautionary measures indicated in this manual.

For Optimum Safety

- If you have a skin condition or any medical concerns, please consult a dermatologist before use.

SAFETY WARNINGS

- Cleansing with the Scion Sonic Refresh should be comfortable -- immediately discontinue use and consult a physician if you experience discomfort.
- Exercise particular care when cleansing the under-eye area and do not bring the device in contact with the eyelids or the eyes.
- For reasons of hygiene, shared use of the Scion Sonic Refresh is not recommended.
- Close supervision is necessary when the device is used by, on, or near children and those with reduced physical and mental abilities.
- Avoid leaving your Scion Sonic Refresh in direct sunlight and never expose it to extreme heat or boiling water.
- Discontinue the use of this device and its charger if they appear to be damaged in any way.
- Given the efficiency of the Scion Sonic Refresh cleansing routine, it is recommended that you do not use the device for more than 2 minutes at a time.

TROUBLESHOOTING

The Scion Sonic Refresh does not switch on when the power button is pressed:

- Battery is empty. Recharge the device for 3 hours until fully charged.
- Interface is locked. Connect the charging cable to restore the function to normal.

LED does not pulse when the charger is connected:

- Battery is fully charged and ready to use for up to 130 full cleansing routines.

The Scion Sonic Refresh cannot be switched off and/or the interface buttons do not respond:

- Battery is drained. Please charge.
- Charging cable is not properly connected. Check wall socket and charging port.
- The microprocessor is temporarily malfunctioning. Connect to the charging cable to restore function to normal.

Note:

If you do not find the answer to your specific issue in this troubleshooting section or if you have any other questions regarding the functions and operation Scion Sonic Refresh, please contact support@scionskin.com.

PRODUCT SPECIFICATIONS

Product Name	Scion Sonic Refresh
Area of Care	Face and Neck
Function	Sonic Facial Cleanser and Anti-Aging Massage
Size	130 x 56 x 28 mm
Weight	125g
Material	Body-safe silicone and ABS
Charging Type	Wireless Charging
Charging Duration	3 hours
Standby Mode	200 days
Battery Capacity	Li-on 200 mAh 3.7V
Battery Working Time	Up to 130 complete Routines
Interface	3-Button

WARRANTY AND AFTER SALES

Register the Device

To activate your 1-year Limited Warranty, complete the registration within thirty (30) days from date of purchase. Failure to do so will deem the warranty null and void.



Scan to register your device

For after sales service, please email:
support@scionskin.com

